

ALUMINUM GROUP OUTSERT[®] SIGNAGE CEILING ROD - INSTALLATION INSTRUCTION

Remove the end trim plates with a small phillips screw driver. The ceiling rod assemblies are shipped separately and need to be attached to the sign. The stud in one end of the assembly slides into the track at the top of the sign as shown. Position the ceiling rod assemblies on each side of the sign and turn rod tight against the top of the sign by pulling the rod away from the track and at the same time turning the rod clockwise. Loosen the Grid Scissor Fasteners just enough to slide onto the grid. Tighten the Grid Scissor Fasteners in place by turning the rod counter-clockwise.

