

## ALUMINUM GROUP OUTSERT® SIGNAGE INSTALLATION INSTRUCTION -SNAP-OUT TILES

**SNAP-OUT**: using the snap-out tool (p/n 100793), start disengaging the tile from either the left side (shown) or the right side. Once a lower corner is disengaged move directly above and disengage the top corner. Move to the opposite direction from your starting point and disengage the tile in this way until the tile is completely removed.

Do not force or bend the tile from the end to remove.

**SNAP-IN**: carefully alien the tile with the edge of the sign or with the edge of another tile. Start on one corner and snap-in the tile as described above for snapping out the tile.

