

DOT-DASH[®] SIGNAGE / INSTALLATION


SIDE OF PANEL MOUNT - KNOLL DIVIDENDS

The side of panel bracket for the dividends panel are hidden from view when installed.


Remove the fabric insert. The bracket slides onto either the left or right side of the frame. The bracket can be adjusted if the fit is too loose simply by squeezing the bracket "U" opening. (Optional: A #6 X 1/2" pan head screw, part number 100268, is provided and can be used to secure the bracket to the frame through the 1/4" hole is located on the front of the bracket. A 1/8" hole must be drilled into the frame.) Replace the fabric insert.

The back half of the dot is attached to the bracket with a #8-32 x 5/8" flat head screw. A 3/32" allen wrench (provided) is required to loosen or tighten the screw. By rotating the dot with this screw loose, plaque can be positioned as shown:

LEFT SIDE OF PANEL

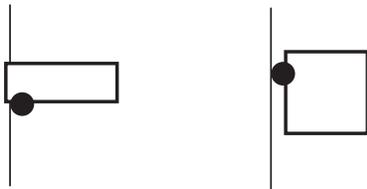

RIGHT SIDE OF PANEL

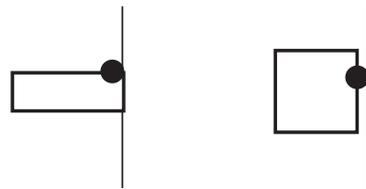

The screw holding the back half of the dot to the bracket **must be firmly tightened** to hold the dot and the plaque in desired position.

Hold plaque against shoulder of dot and turn cap and washer tightly against plaque (rubber side of washer against plaque).

