

DOT-DASH[®] SIGNAGE / INSTALLATION


SIDE-OF PANEL MOUNT - HERMAN MILLER AO 3

The bracket clips into the slotted standard on either side of the panel. Bracket fits best at the end of a panel run to bump against the end cap.


The two teeth in the bracket must extend through the slots in the standard and slide down to secure the bracket.

The back half of the dot is attached to the bracket with a #8-32 x 5/8" flat head screw. A 3/32" allen wrench, (provided), is required to loosen or tighten the screw. By rotating the dot with this screw loose, plaque can be positioned as shown:

LEFT SIDE OF PANEL

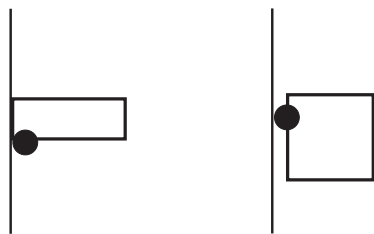

RIGHT SIDE OF PANEL

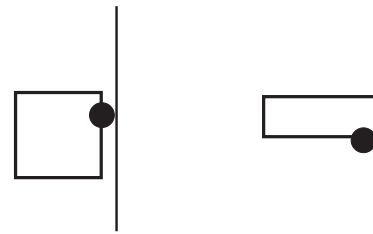

The screw holding the back half of the dot to the bracket **must be firmly tightened** to hold the dot and the plaque in desired position.

Hold plaque against shoulder of dot and turn cap and washer tightly against plaque (rubber side of washer against plaque).

